



NeatComfort

Bedding Simplified

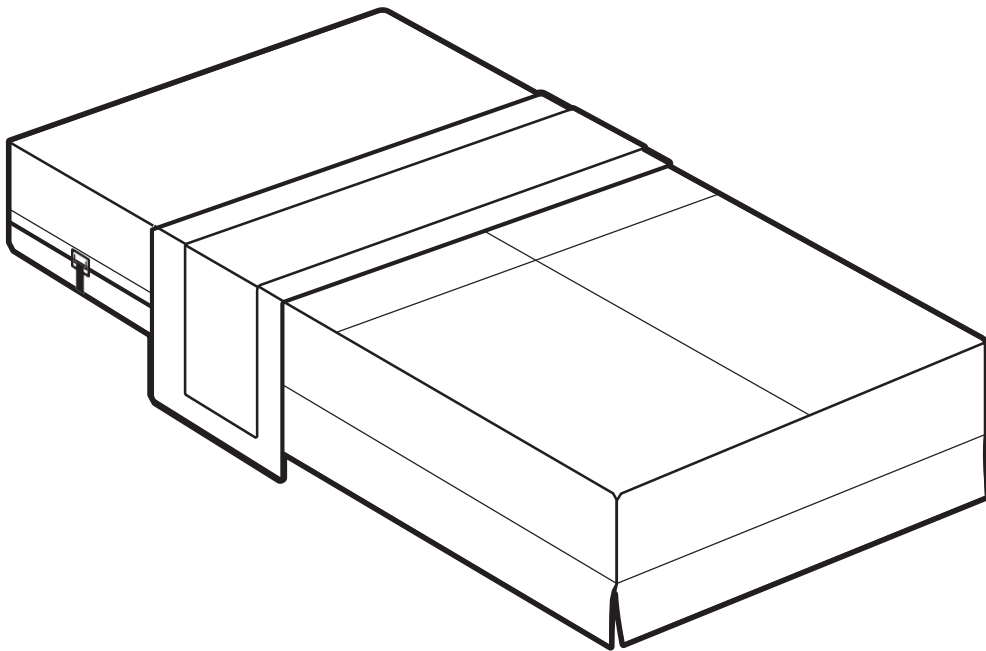


Installation Manual


Modern Design

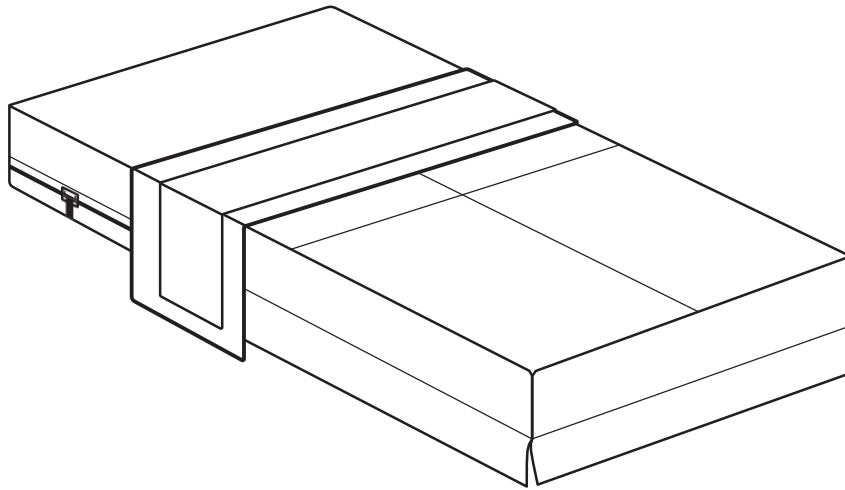




Classic Design

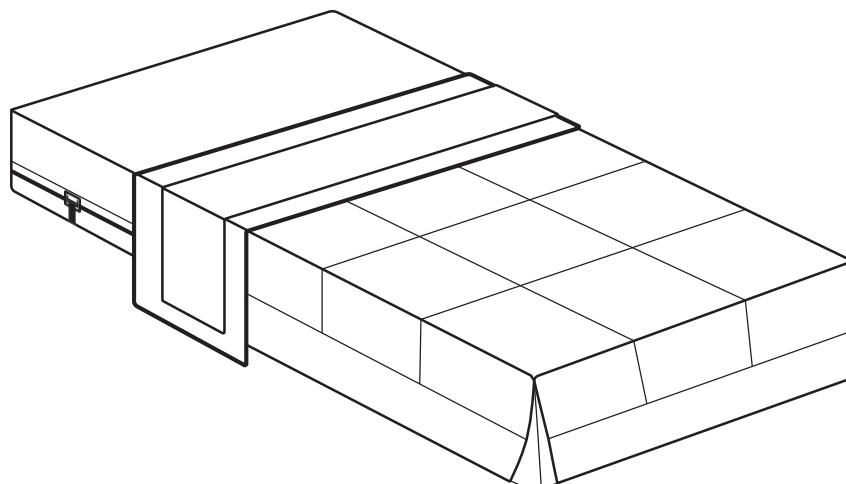

Comforter System Assembly

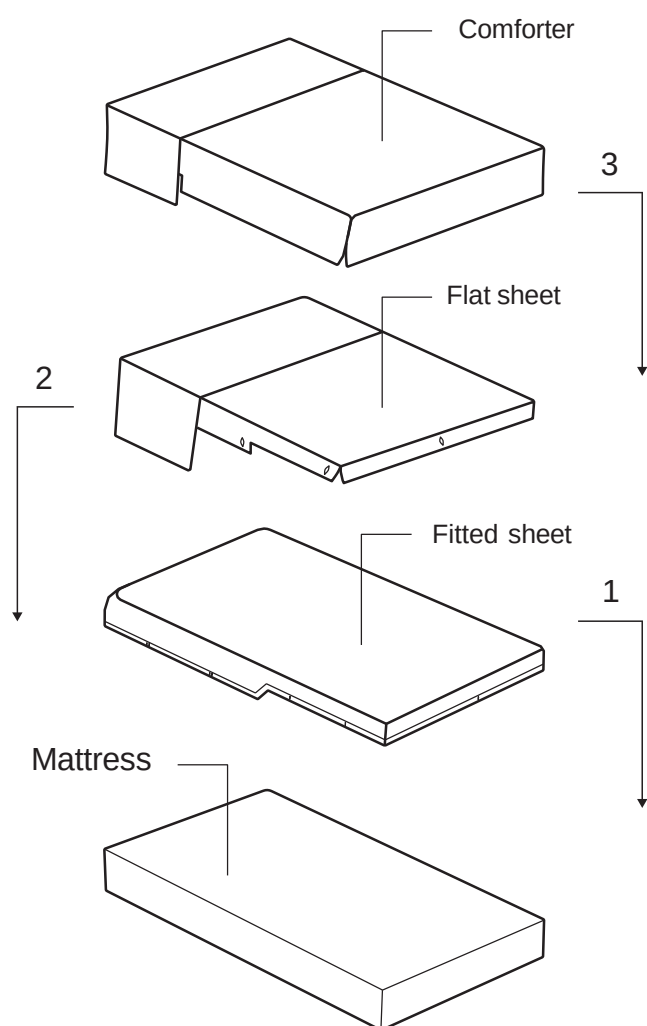


System Parts

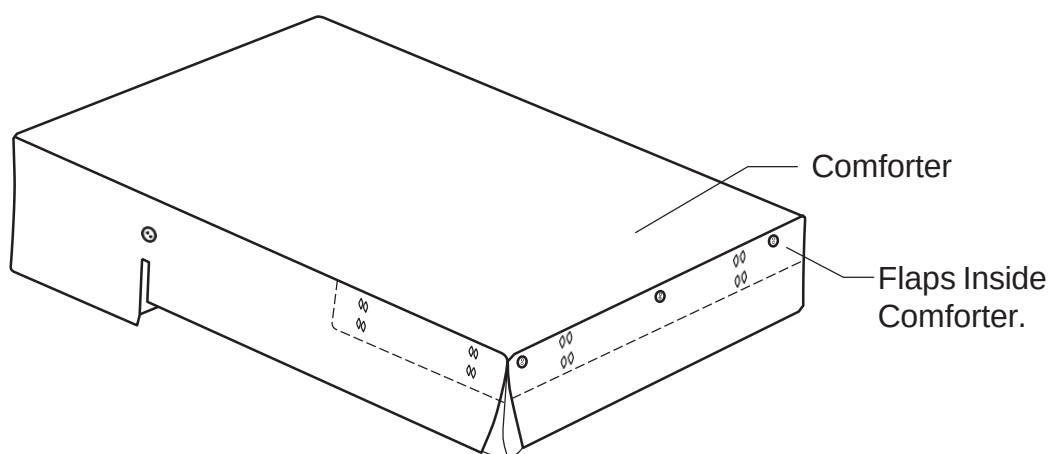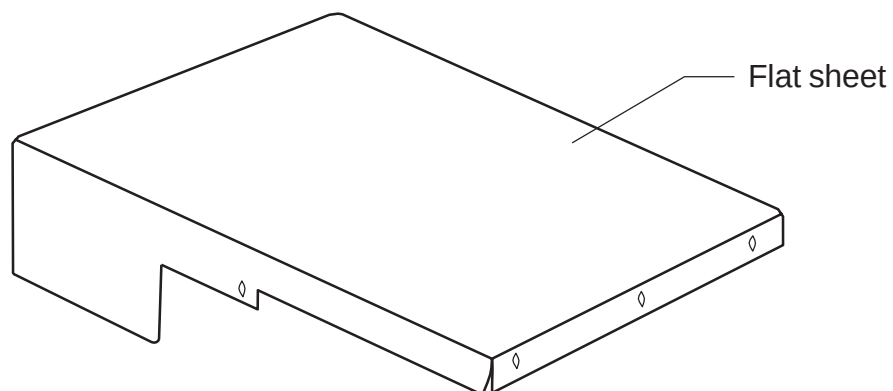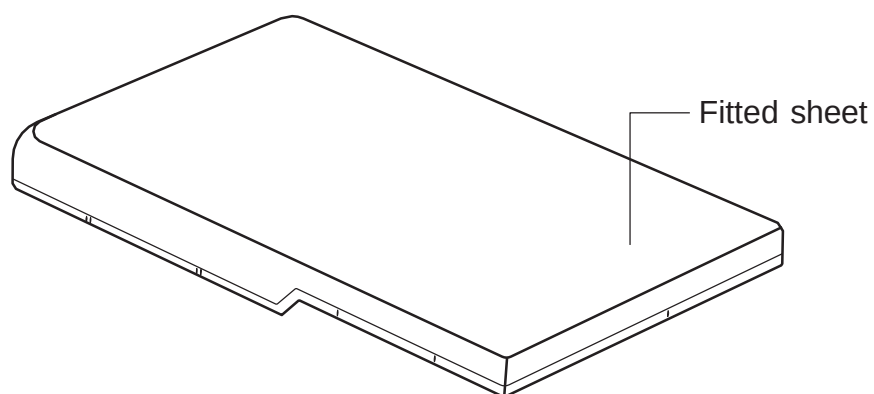


System Parts

“H” Anchor

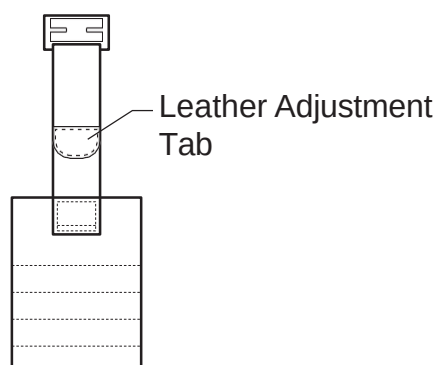


“Y” Anchor

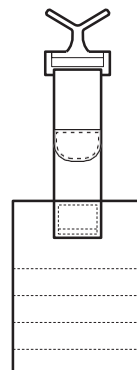

Assembly Step


1. Place Fitted Sheet on Mattress

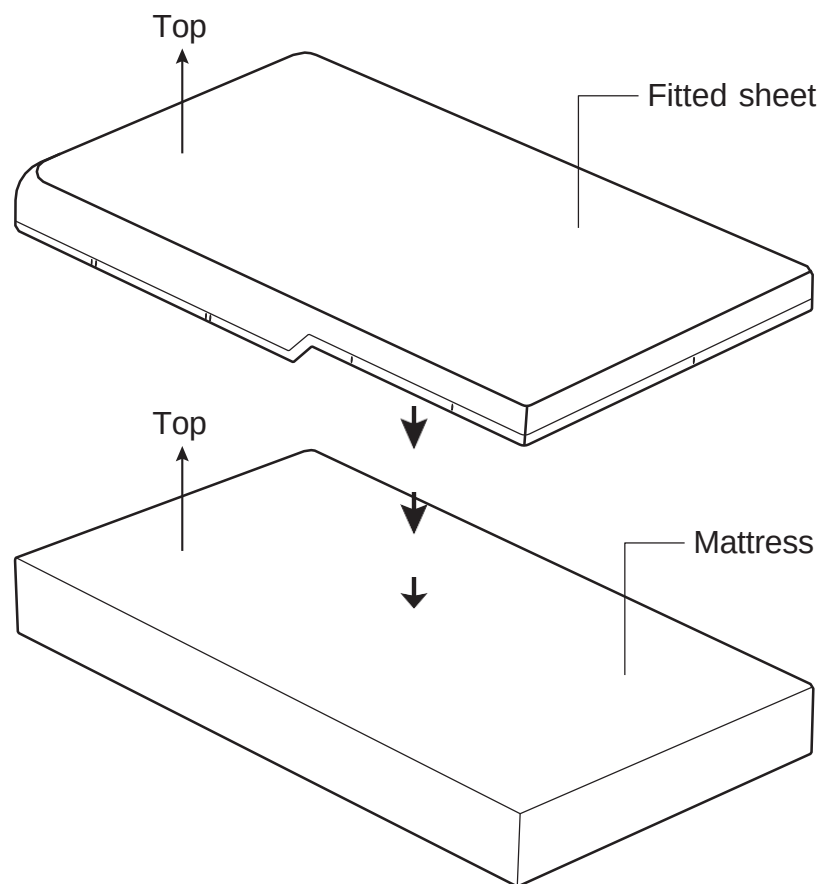

Assembly Step

2. Place Flat Sheet on Fitted Sheet


- Align the Flat Sheet on top of the Fitted Sheet.

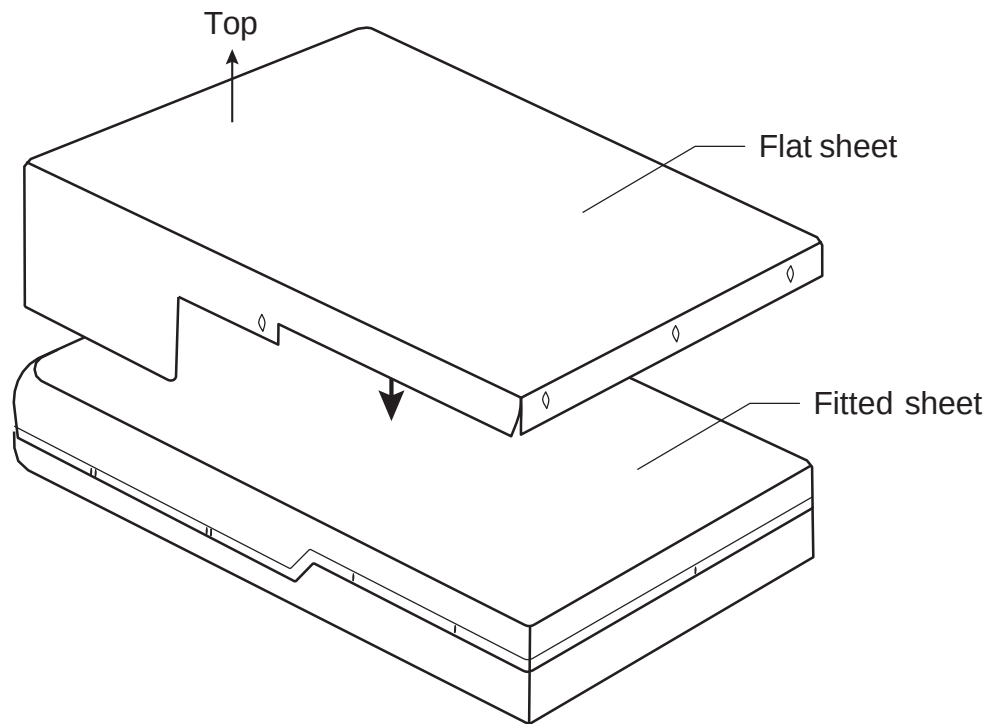

Assembly Step


3. Place Comforter on Flat Sheet

- Align the Comforter on top of the Flat Sheet.
- Utilize the three buttons located at the base of the Comforter to fasten the Flat Sheet to the Comforter.
- The buttons on the sides of the Comforter are not required for attachment and considered optional.

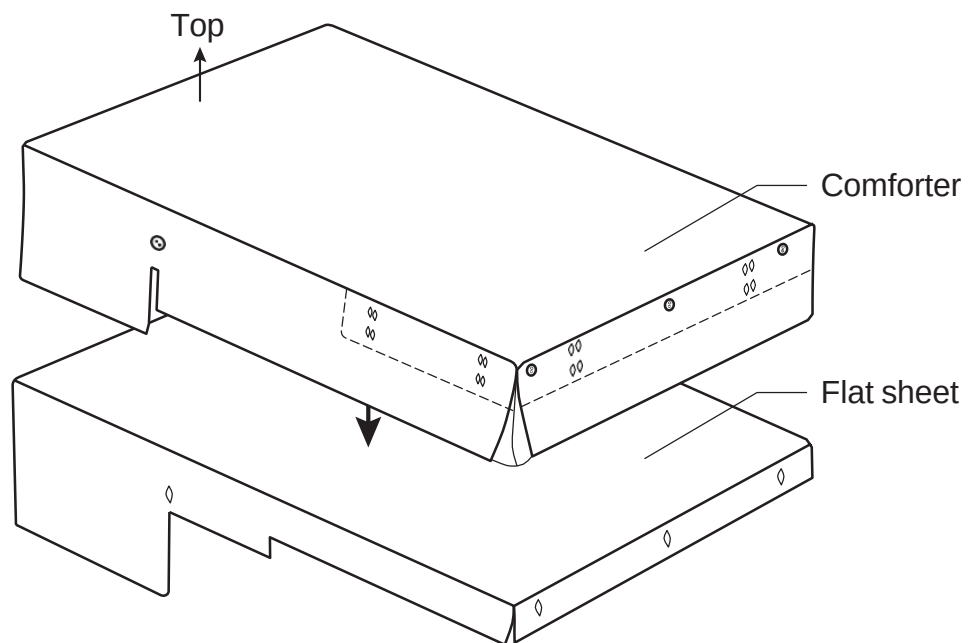

Assembly Step



4. Complete System Stack. Steps 1-3

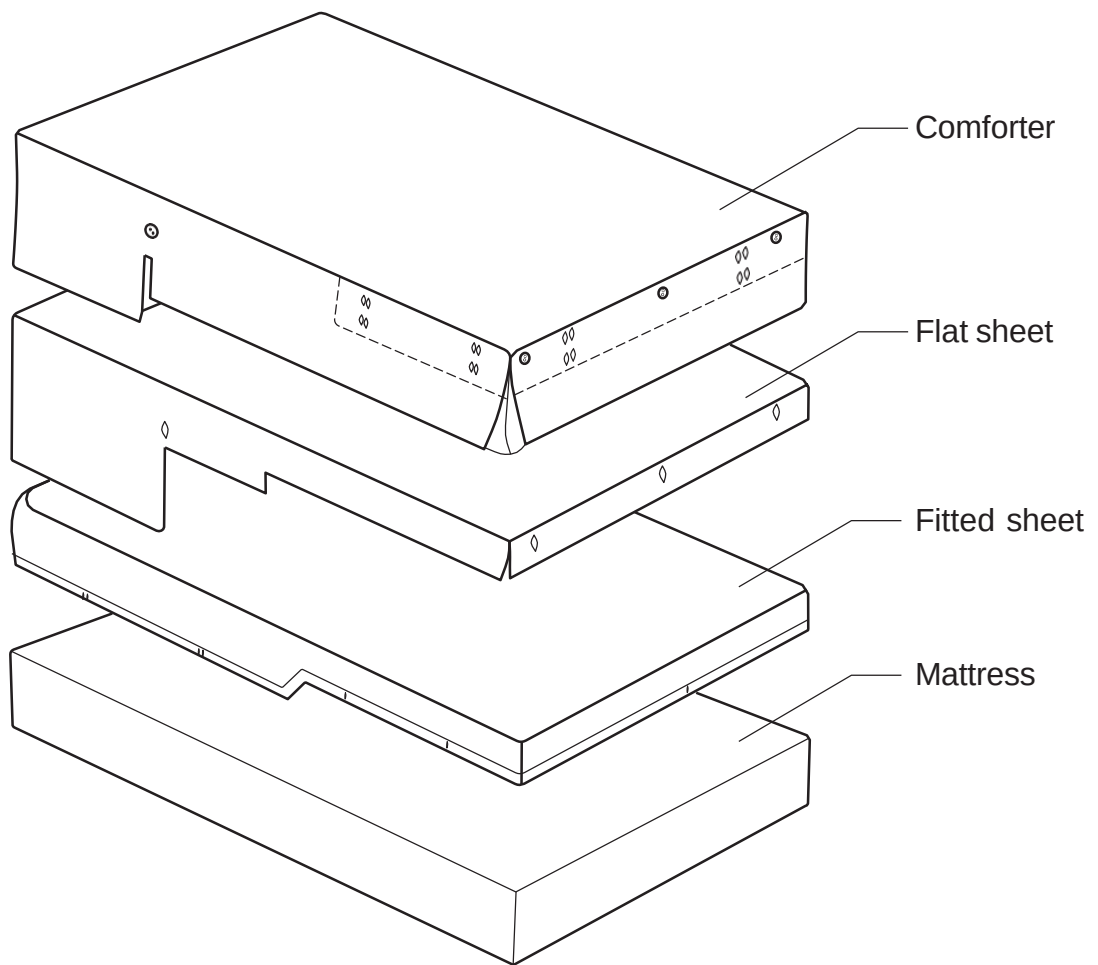

Assembly Step

5. Place Anchor "H" and Anchor "Y" under the mattress

- Lineup each of the 4 Anchor "H" with the buttonholes on the upper left and right of the Flat Sheet. Insert the Anchor pads 12" - 16" deep underneath the Mattress.
- Repeat the above steps with the remaining 5-6 buttonholes along the bottom half of the Mattress using Anchor "G" or "Y".

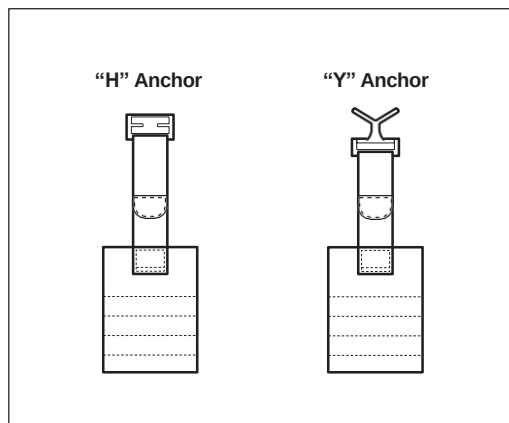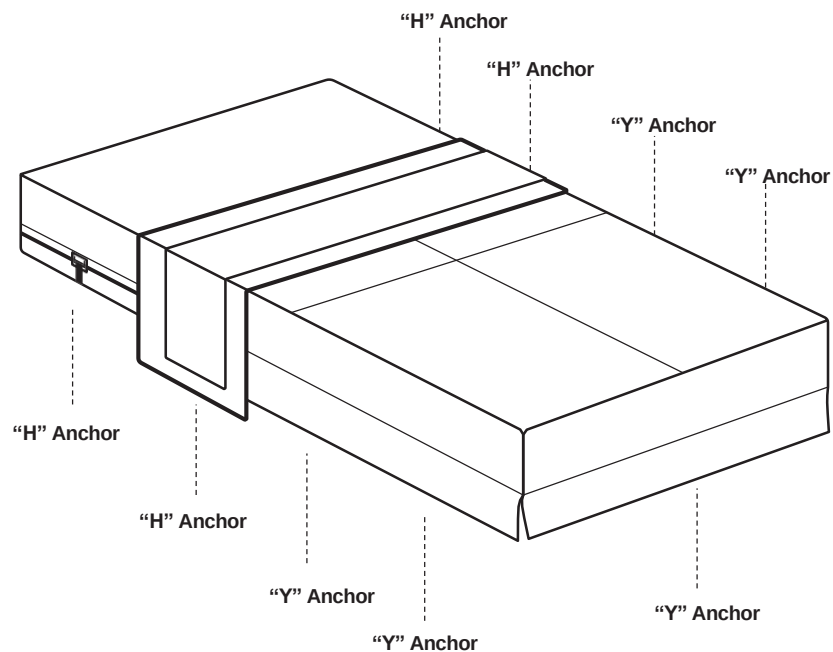


Assembly Step

7. Connect Anchor "H" and Anchor "Y" Buckles to the Buttonholes on the Fitted Sheet and the Comforter as follows:


For H Buckles:

- Insert the left prong of the H Buckle into the left buttonhole and the right prong into the right buttonhole.

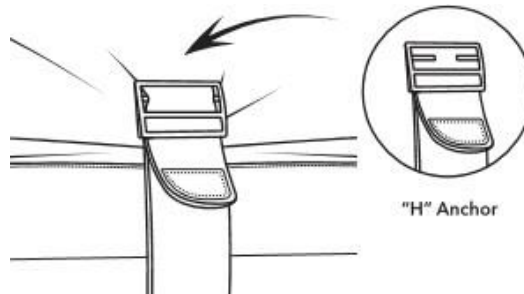

For Y Buckles:

- Align the buttonholes on the flaps inside the comforter with the buttonholes on the edges of the fitted sheet.
- Insert the "Y" buckle prongs into the aligned buttonholes to secure the Comforter and Fitted Sheet.
- Repeat this step for all Anchors along the perimeter of the bed.

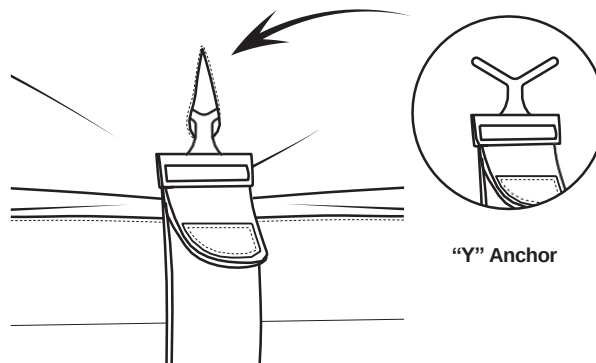

Scan QR Code for
additional Information
and Install Instructions

Scroll to "How to Instructions" Section
| Follow Written and Video Instructions |

